


## TP – PUSH-FIT FILLER BREATHER

## TPF (BR) – PUSH-FIT FILLER BREATHER WITH FILTER

## TPV – PUSH-FIT FILLER BREATHER WITH VENT VALVE

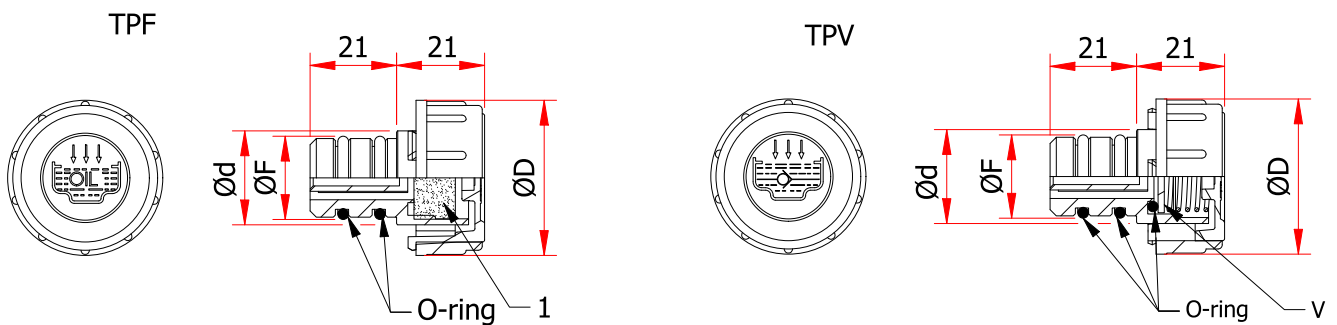

1 = Air filter V = One way check valve

Filler breather, with easy grip vertical ribs, ensuring high mechanical resistance at both low and high temperatures, dimensional stability and shocks resistance. Push-fit mounting into drilled hole (refer to corresponding sizes shown in the table below) tolerance  $\pm 0,1$  mm with  $1/45^\circ$  chamfer.

- **Material:** Polyamide PA66.
- **Sealing:** two O-rings NBR 70 Shore.
- **Maximum working temperature:** 100°C/212°F.

**TPF:** with large breathing capacity, it is suggested to be used where an high volume of airflow takes place; not recommended for usage on mobile equipment, where strong movement of the oil tank is present.

- **Filter:** Polyurethane air filter located under the lid.

- **Bronze filter:** where the vent hole is subjected to strong oil splashes, especially during the starting of the machine when the oil is still thick, sintered bronze filter (30 microns filtration degree) allows the air to flow but stops fluid overflowing.

**TPV:** used in applications where a certain pressure needs to be maintained into the tank.

- **Check valve:** opens at a pressure of about 0.30 bar and closes reset at similar pressure. It allow air to vent out under the above conditions, but does not allow air to move back in, preventing dust particles or other forms of contamination from the atmosphere to enter the oil.

### Special version

**Lid:** possible customization of color, logo or neutral version.

| Cod.  | Cod.        | Cod.   | F  | D  | d  | Pack. |
|-------|-------------|--------|----|----|----|-------|
| TP/18 | TPF/18 (BR) | TPV/18 | 18 | 36 | 23 | 100   |
| TP/20 | TPF/20 (BR) | TPV/20 | 20 | 36 | 24 | 100   |
| TP/26 | TPF/26 (BR) | TPV/26 | 26 | 41 | 28 | 50    |
| TP/30 | TPF/30 (BR) |        | 30 | 47 | 33 | 50    |